




Driven Beyond Perfection

COOLANT RECOVERY TANK INSTALLATION INSTRUCTION SUPPLEMENT

APPLICATIONS: 1965 - 1968 Mustang

COOLANT RECOVERY TANK INSTRUCTIONS

1. Remove the two (2) radiator mounting screws located on the drivers side of the radiator.
2. Install the two (2) mounting brackets loosely as shown on the illustration.
3. With the supplied bolts, loosely attach the radiator brackets where you removed the radiator mounting screws.
4. Adjust the height and side to side location to your preferred location and tighten bolts.
5. Using 5/16" hose (not supplied), run a length from the bottom nipple of the recovery tank to the radiator overflow tube, making sure to keep large radii to prevent kinking.
6. Make sure you have a Scott Drake B-8100 or equivalent 13 lb. radiator cap. We recommend our C9ZZ-8100-A Motorcraft zinc plated cap if not using a billet cap.
7. If installing in an application other than 1965-68 Mustang, it may be necessary to drill holes and add 2 nuts to mount tank in a desired location.
8. Remove adhesive backing from "COOLANT" sticker, place in desired position and install.

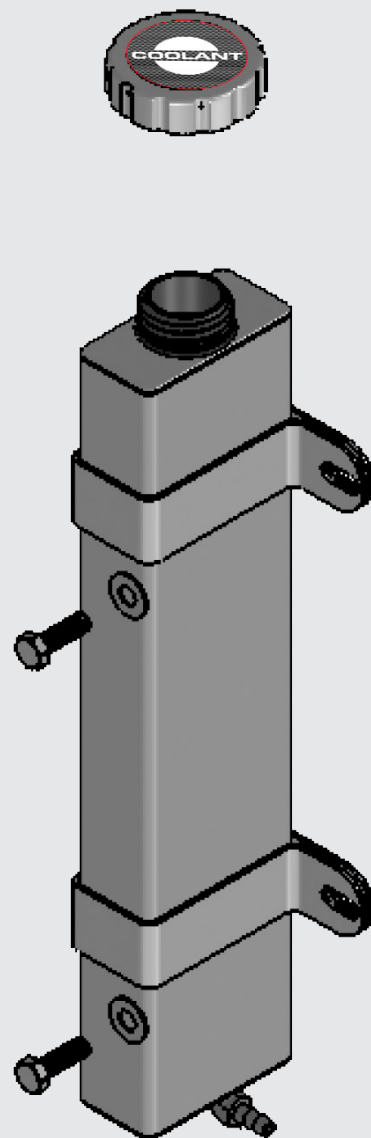

15C5ZZ-8C077-AL